


# Motorized vertical blind operation manual

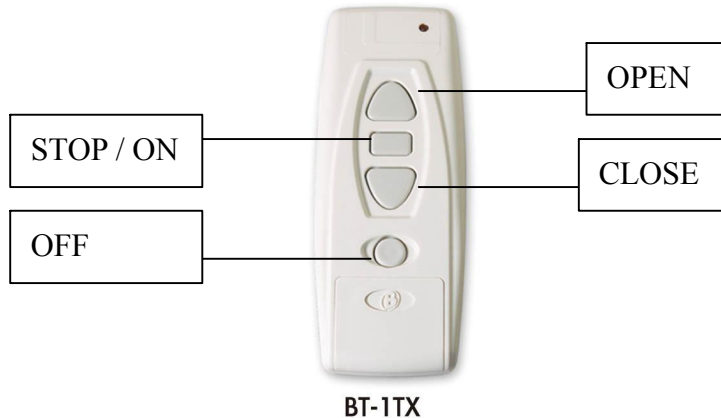

## 1. Action by transmitter:

### (A). Blind rotation:

1. Turn counterclockwise: Press  $\triangle$  within 2 seconds to adjust the angle of vertical blind.
2. Turn clockwise: Press  $\nabla$  within 2 seconds to adjust the angle of vertical blind.

### (B). Open / close vertical blind :

1. OPEN-key  $\triangle$  : Press OPEN-key over 2 seconds the vertical blind will open to the limit. As press OPEN-key during vertical blind is closing the vertical blind will stop and press OPEN-key again vertical blind will open.
2. STOP/ON-key  $\square$  : Press STOP-key the action will stop while the vertical blind is operation.
3. CLOSE-key  $\nabla$ : Press CLOSE-key over 2 seconds the vertical blind will close to the limit. As press CLOSE-key during vertical blind is opening the vertical blind will stop and press CLOSE-key again vertical blind will close.
4. OFF-key  $\bigcirc$  : As press OFF-key will lock the receiver the OPEN-key and CLOSE-key don't work until press STOP-key.

## 2. Clearance code and enter learning mode :

- (A). Input the first transmitter: Power off for 15 seconds then power on receiver. Then press UP,STOP,DOWN and OFF key of transmitter at the same time within 8 seconds. The receiver will copy new code and remove the old code.
- (B). Add another transmitters : Take one transmitter that can control receiver. Press the STOP-key and OFF-key of transmitter simultaneously to enter learning mode. After the receiver beep 3 sounds then press OPEN-key and CLOSE-key of new transmitter simultaneously. If didn't input signal within 5 seconds, receiver will beep long sound then quit learning mode.