

GUIDE OF HANDICAPPED SWITCH

1. Before got in the door, users could enter the door directly when the door opened. or press the outer switch (PUSH) button when the door closed, then the door will hold open, but it was ineffective to press switch (PUSH) button when the OCCUPIED indicator lighted.
2. After the users inside, users must press inner switch (LOCK) button , then the door will close and in lock automatically .
3. After the door closed and locked, the outer indicator light will be on OCCUPIED during using the door, then the door cannot be opened from outside, even the (PUSH) button pressed .
4. Before got out the door, users must press (OPEN) botton from inner switch first, then the door will hold open and the indicator light was off.
5. Users could press the outer switch (PUSH) button when leave the door, the door closed but can't be locked. (to keep the door to shut and break off the smells)

【CAUTION 】

If somebody made a mischief : get inside the door to press (LOCK) button and get out at once before door closed, then door will close and lock(the indicator light on OCCUPIED).

To solve the mischief problem, we have to use key switch to forcibly open the door from outside and then press (OPEN) button from inside switch to release the lock to let the door in normal situation.

